

Install Rayfract® 3.36 under Windows 10 64-bit / Dec 18, 2018

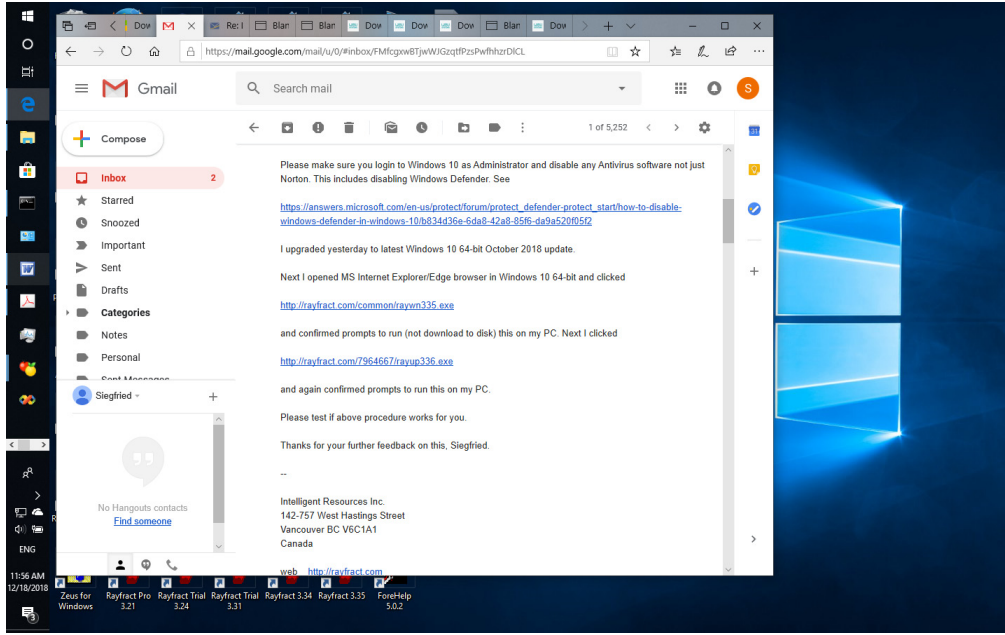


Fig. 1 : Reboot Windows 10 and login as Administrator. [Disable your Antivirus software](#). Open our email in Microsoft Internet Explorer/Edge browser : start by clicking blue e symbol in task bar on left edge of screen. In our email click download link <http://rayfract.com/common/raywn335.exe> .

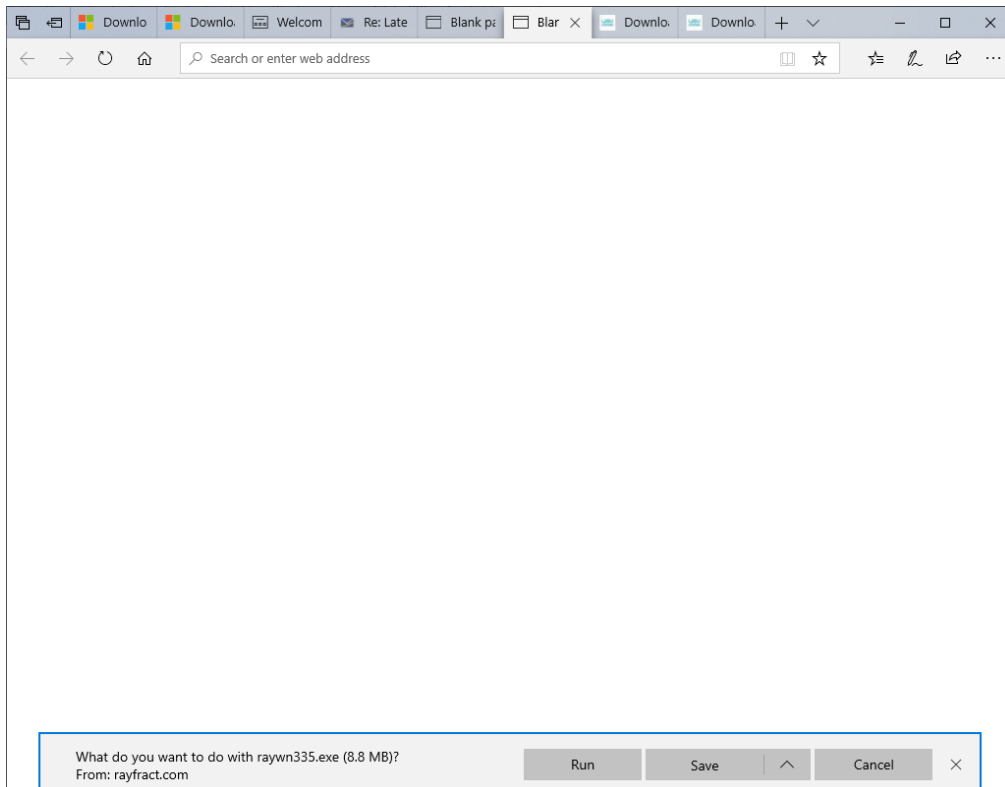


Fig. 2 : in prompt "What do you want to do with raywn335.exe" click Run button

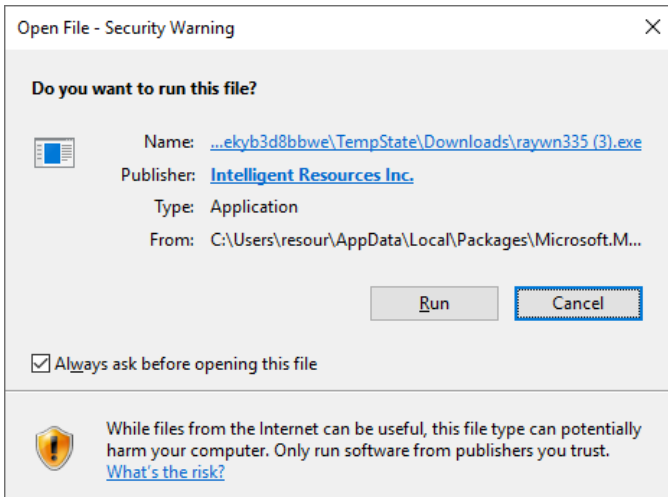


Fig. 3 : in prompt “Do you want to run this file” click Run button

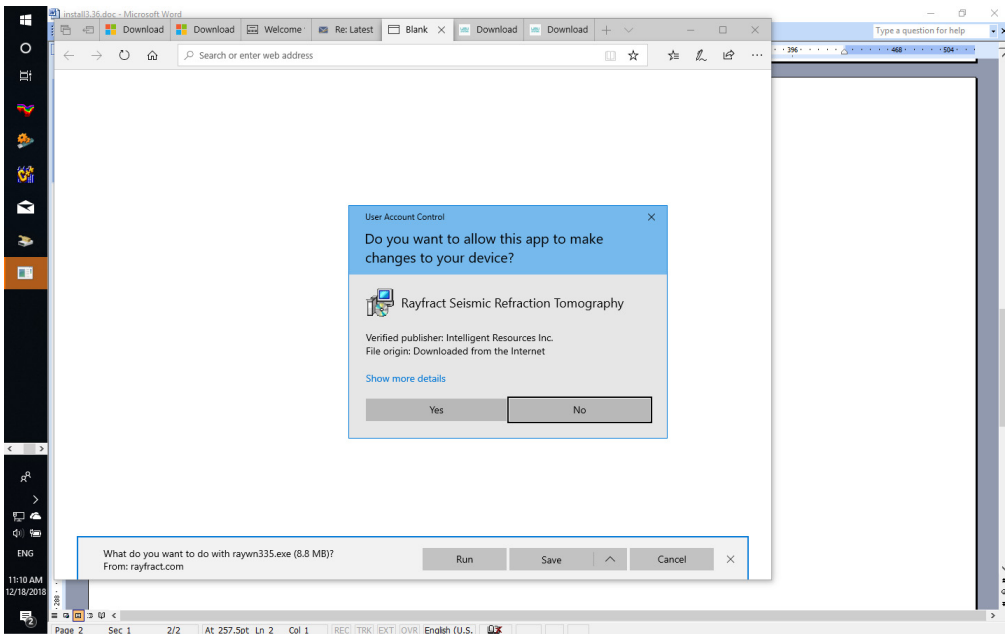


Fig. 4 : click Yes button in prompt “Do you want to allow this app to make changes to your device”

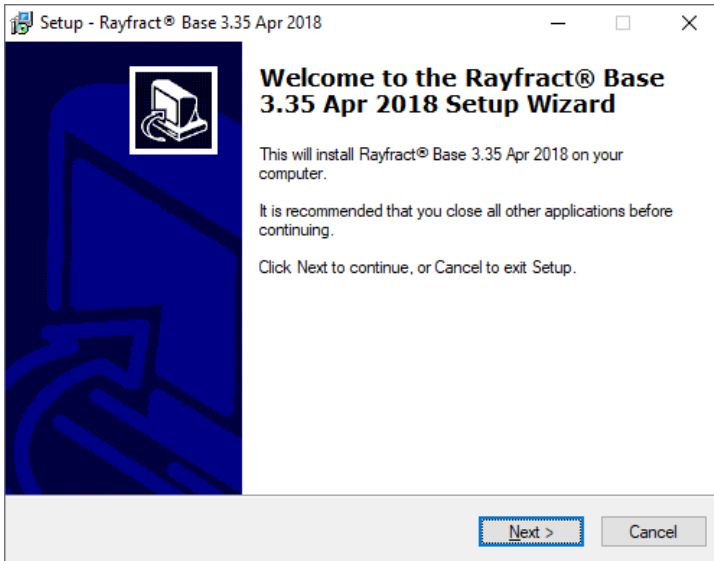


Fig. 5 : click Next button to start installation of Rayfract® Base 3.35. Confirm following prompts.

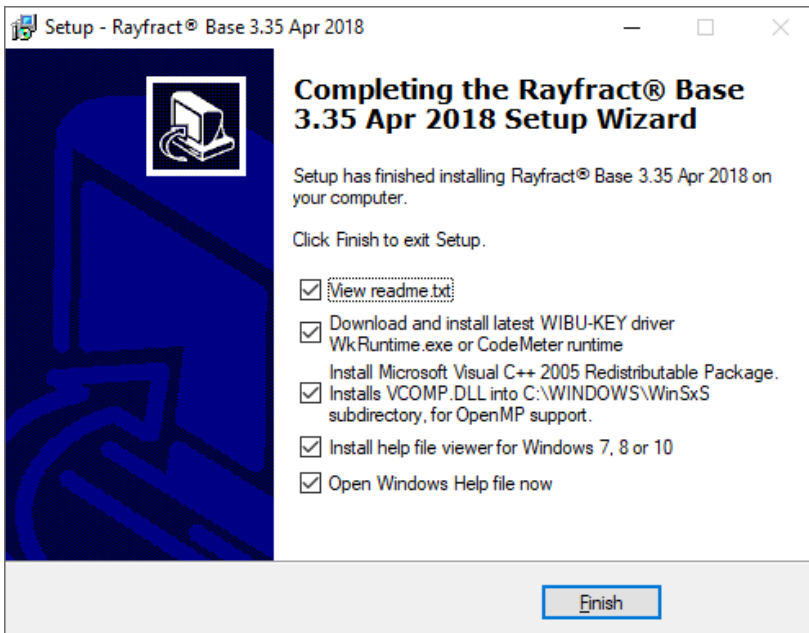


Fig. 6 : click Finish button to finish installation of Rayfract® Base 3.35

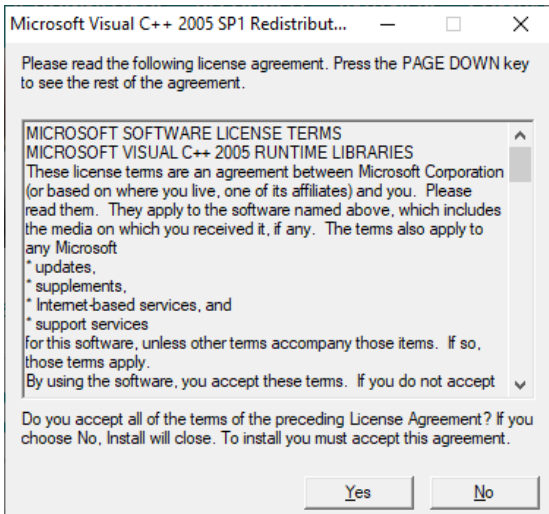


Fig. 7 : click Yes button to install Microsoft Visual C++ 2005 SP1 Redistributable

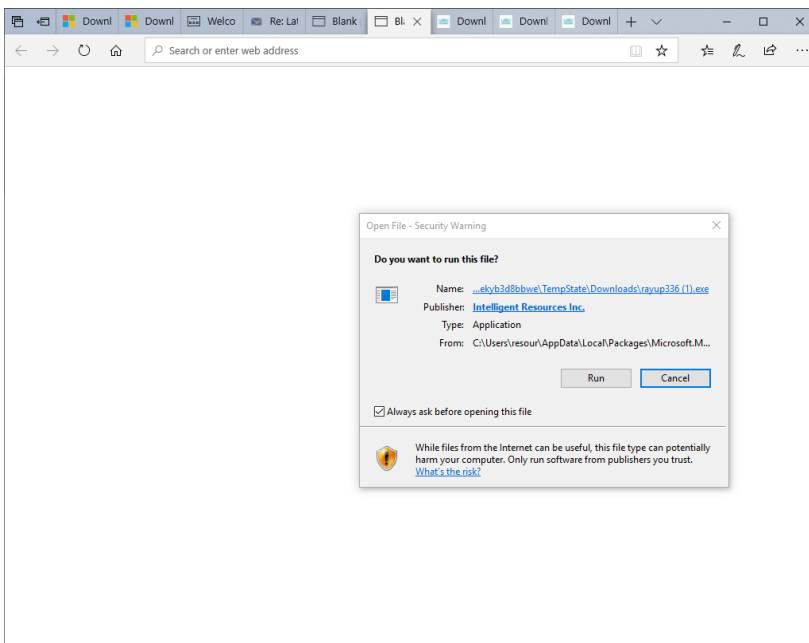


Fig. 8 : go back into Internet Explorer and in our email click <http://rayfract.com/7964667/rayup336.exe>. Click Run button twice.

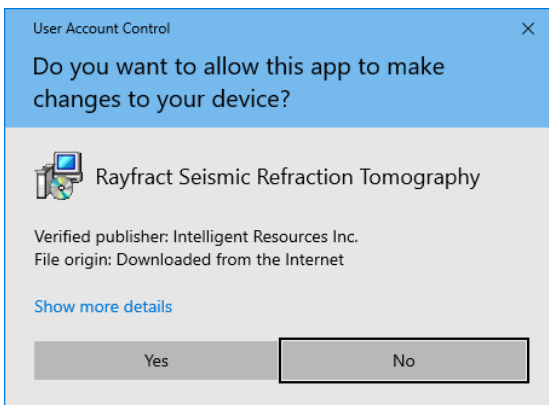


Fig. 9 : Click Yes button in prompt "Do you want to allow this app to make changes to your device ?"

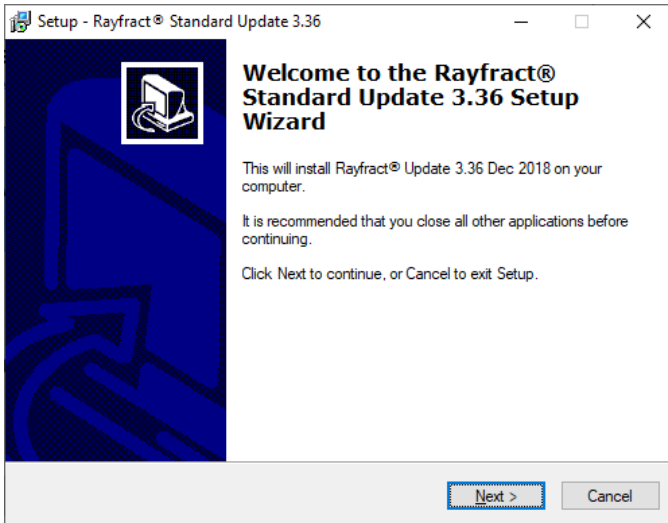


Fig. 10 : Click Next button to start Rayfract® Update 3.36 Dec 2018 installation

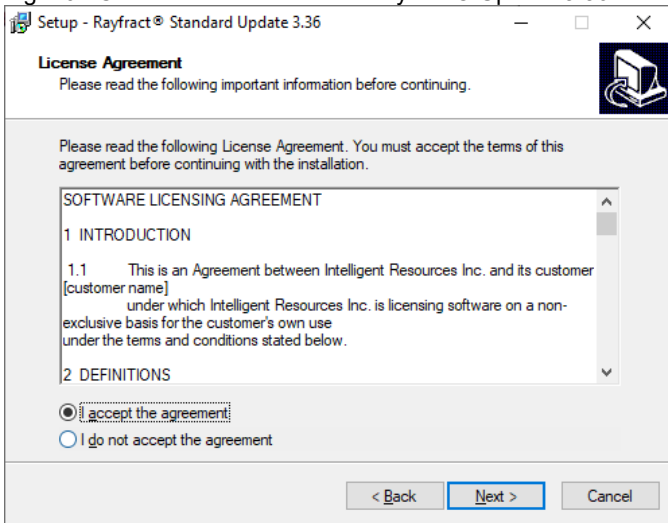


Fig. 11 : Click radio button "I accept the agreement" and click Next button

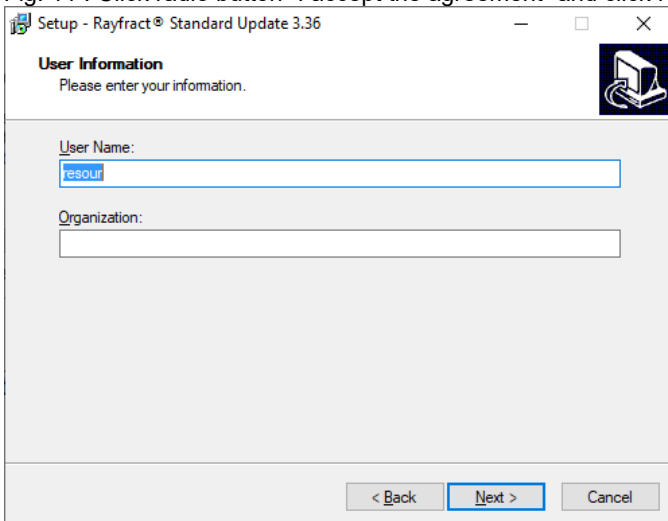


Fig. 12 : Click Next button to confirm User Information prompt

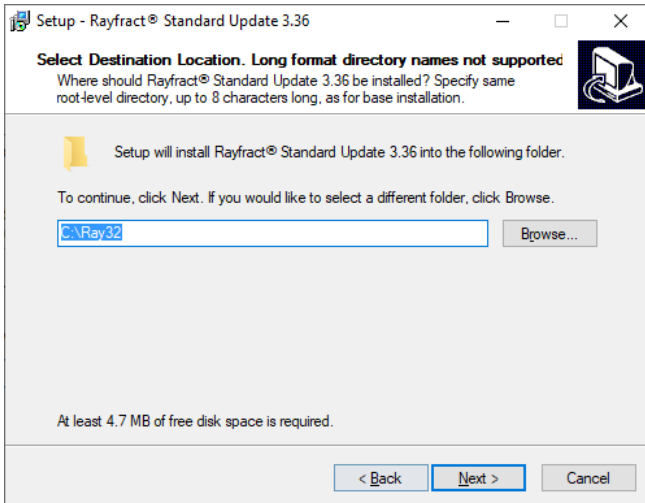


Fig. 13 : Click Next button

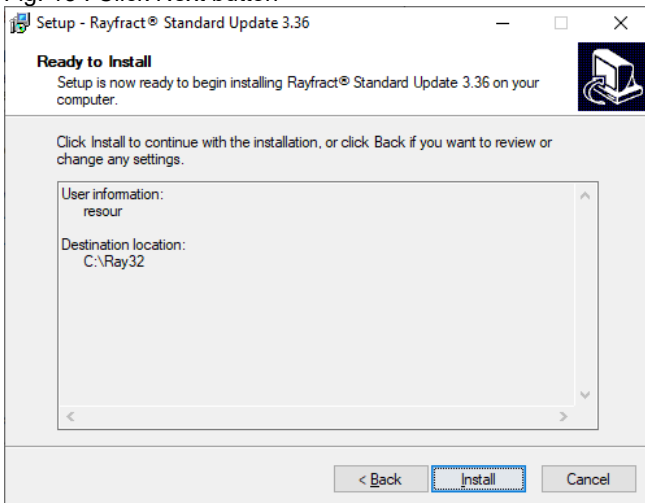


Fig. 14 : Click Install button